
L<u>ink</u>Systems

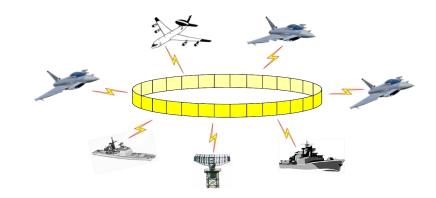

Link 16 -Gateway

Features


- Gateway between IP-based Link 16-networks and radio networks using MIDS LVT 1/2 radios
- MIDS LVT Platforms A, B, D, G, J, Q, R, BU2 support with ET



- Supports WAN-Networks using SIMPLE (STANAG 5602) and JREAP (MIL-STD-3011C) Standard
- Full simulation and analysis of Link 16-Data
- Real time Recording and Playback functions
- Provides situational display (2D, optional 3D) with full air, land, sea, subsurface and space picture
- Provides command and control functions, Track Management and Weapons Control can be issued to connected Link 16-Systems
- Control of Non-C2 Units
- Message and Object based Link 16-Simulation function
- DIS IEEE 1278 Simulation interface
- Remote Control function with network based Control API for event triggering
- Runs on PCs using Windows 7, 8, 10 (64 bits)

Users

- German Armed Forces
- Airbus Defense & Space

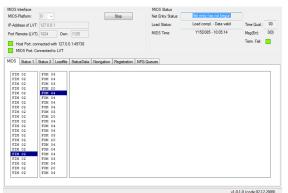

MIDS LVT Connection

MIDS Interface allows connections to MIDS LVT 1/2. Supported Modes: Host Terminal Emulation Monitor Manipulation of Status and Loadfile-Data and FOM-Triggering Platforms supported: B,D,G,J,Q,R (others on request)


Tactical Display

Shows tactical picture in air, land, surface, space and subsurface environment.

Monitors weapons state and allows J7.0 Track Management and J9.0 commands.



Full support of Non-C2 Control via J12.X messages.

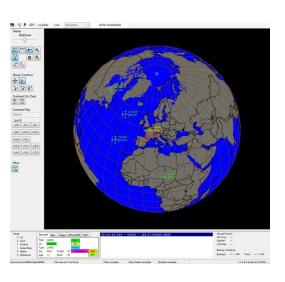

	8 00			Show	v Data a	s: Decode				
						00223/0			MODE I CODE:01 MODE II CODE:0002 MODE III CODE:0003	
						00223/0			VOICE CALL SIGN: LINK 4 ADDRESS:0000 VOICE FREQ	
						00325/0			/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP:SPARE	
						00325/0			LATITUDE, 0.0013 MINUTE:Lat:15:59:47.3S LONGITUDE,	
						00325/0			MODE I CODE:01 MODE II CODE:0002 MODE III CODE:0003	
						00525/0			/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP:SPARE	
						00525/0			LATITUDE, 0.0013 MINUTE:Lat:13:19:37.85 LONGITUDE,	-
						00525/0	- 000	J02.5C1	/VCS IND VOICE CALL SIGN:2525 LAND (GROUND) PLATFOR /EX IND /FT IND /EMG IND /C2 IND /SIM IND SP:SPARE	'Y
						00526/0	- 000	302.61	LATITUDE, 0.0013 MINUTE:Lat:14:35:08.3N LONGITUDE,	
						00526/0			VOICE CALL SIGN: LAND (GROUND) PLATFORM: TROOP C	
						00525/0			LATITUDE, 0.0013 MINUTE:Lat:13:19:37.85 LONGITUDE,	Ν.
						00525/0			/VCS IND VOICE CALL SIGN:2525 LAND (GROUND) PLATFOR	• •
			26 L-	16 .						v
					SIM	00526/0	- 00	J02.6I	/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP.SPARE	
	10:58	:43.4	26 L-	16 :	SIM SIM		- 000	J02.6I J02.6E0	/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP.SPARE	
	10:58	43.4	26 L- 26 L-	16 : 16 :	SIM SIM SIM	00526/0	- 000 -	J02.6I J02.6E0 J02.6C1	/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP.SPARE	
	10:58 10:58 10:58	43.4	26 L- 26 L- 16 L-	16 : 16 : 16 :	SIM SIM SIM SIM	00526/0 00526/0 00526/0	- 000 - 000 - 000 -	J02.6I J02.6E0 J02.6C1 J02.2I	/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP.SPARE LATITUDE, 0.0013 MINUTE:Lat:14:35:00.3N LONGITUDE, VOICE CALL SIGN: LAND (GROUND) PLATFORM:TROOP C	
l	10:58 10:58 10:58 10:58	43.4	26 L- 26 L- 16 L- 16 L-	16 : 16 : 16 : 16 :	SIM SIM SIM SIM SIM	00526/0 00526/0 00526/0 00221/0	000 - 000 - 000 - 000 -	J02.6I J02.6E0 J02.6C1 J02.2I J02.2E0	/EX IND /FT IND /EMG IND /C2 IND /SIM IND SP:SPARE LATITUDE, 0.0013 MINUTE:Lat:14:35:00.3N LONGITUDE, VOICE CALL SIGN: LAND (GROUND) PLATFORM:TROOP C /EX IND /MC IND /FT IND /EMG IND /C2 IND /SIM IND /	s
	10:58 10:58 10:58 10:58 10:58	43.4 43.4 55.5 55.5 55.5	26 L- 26 L- 16 L- 16 L- 16 L-	16 : 16 : 16 : 16 : 16 :	SIM SIM SIM SIM SIM SIM	00526/0 00526/0 00526/0 00221/0 00221/0	000 - 000 - 000 - 000 - 000 - 000 -	J02.6I J02.6E0 J02.6C1 J02.2I J02.2E0 J02.2C1 J02.3I	/EX IND /FT IND /EMG IND /C1 IND /SIM IND SP:SFARE LATITUDE, 0:001 MHUNELLAL14153004.3M LONGITUDE, WOICE CALL SIGNI LAND (GROUND) FLATGORMITROOF (75K IND /KC IND /FI IND /MS IND /C2 IND /SIM IND / MODE I CODE:00 MODE II CODE:0002 MODE III CODE:0003 (XK IND /FT IND /EMS IND /C2 IND /SIM IND SP:SFARE	s
	10:58 10:58 10:58 10:58 10:58 10:58	43.4 43.4 55.5 55.5 55.5	26 L- 26 L- 16 L- 16 L- 16 L- 16 L-	16 : 16 : 16 : 16 : 16 : 16 :	SIM SIM SIM SIM SIM SIM	00526/0 00526/0 00526/0 00221/0 00221/0 00221/0	000 - 000 - 000 - 000 - 000 - 000 -	J02.6I J02.6E0 J02.6C1 J02.2I J02.2E0 J02.2C1 J02.3I	/EX IND /FT IND /EMG IND /GZ IND /SIM IND SP:SFARE LATITUDE, 0.0013 MIUDET Latit135000.5N LONGITUDE, VOICE CALL SIGN: LAND (GROUND) PLATFORM:TROOP C/ (XK IND /KG IND /FT IND /GMS IND /GZ IND /SIM IND / LATITUDE, 0.0013 MINUTE:Lat:57:28:52.4N LONGITUDE, MODE I CODE:010 MODE III CODE:0003	s
	10:58 10:58 10:58 10:58 10:58 10:58	43.4 43.4 55.5 55.5 55.5	26 L- 26 L- 16 L- 16 L- 16 L- 16 L-	16 : 16 : 16 : 16 : 16 : 16 :	SIM SIM SIM SIM SIM SIM	00526/0 00526/0 00526/0 00221/0 00221/0 00221/0 00223/0	000 - 000 - 000 - 000 - 000 - 000 -	J02.6I J02.6E0 J02.6C1 J02.2I J02.2E0 J02.2C1 J02.3I	/EX IND /FT IND /EMG IND /C1 IND /SIM IND SP:SFARE LATITUDE, 0:001 MHUNELLAL14153004.3M LONGITUDE, WOICE CALL SIGNI LAND (GROUND) FLATGORMITROOF (75K IND /KC IND /FI IND /MS IND /C2 IND /SIM IND / MODE I CODE:00 MODE II CODE:0002 MODE III CODE:0003 (XK IND /FT IND /EMS IND /C2 IND /SIM IND SP:SFARE	s


Message Display

Decodes messages according to XML-based STANAG-files. Various filters applicable Multiple instances possible.

dynamic static 🗖 🗖 🚺 🕼 🛃 🛃 💓 🖽

Activity Display

Shows network participants activity states. Icons can be placed over background graphics with specific network layout. Drop -Offs will be immediately highlighted. Clear and immediate "Commanders Overview" over network status.

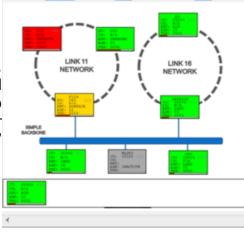

LinkSystems GmbH Am Pandurenberg 4 84094 Elsendorf GERMANY

www.linksystems.de info@linksystems.de

Phone: +49 8753 966544-0 Fax: +49 8753 966544-99

© LinkSystems GmbH, 2020